

Bacteria Test

http://www.sclgiene.com/product_details.php?prodId=5


Scigiene Corporation

1295 Morningside Avenue, Unit 16

Scarborough, Ontario M1B 4Z4 Canada


(416) 261-4865

SystemSURE Plus™

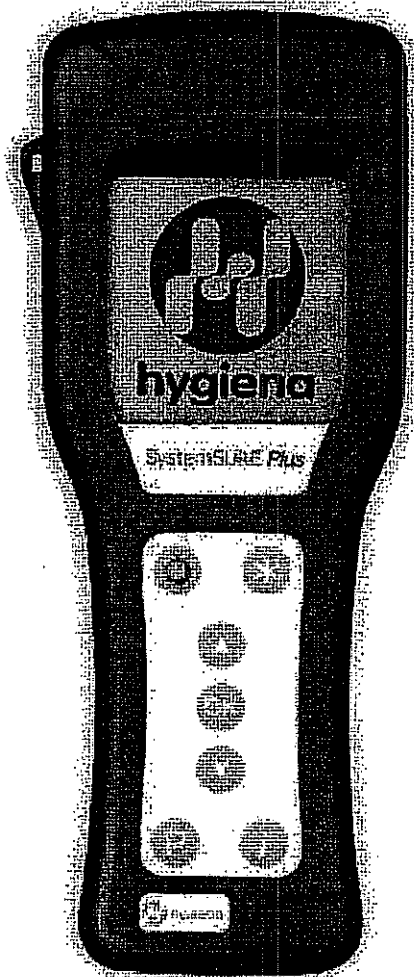

Delivering simplicity and affordability through innovation.

The SystemSURE Plus ATP luminometer is the next generation of the best selling SystemSURE II. Designed with state-of-the-art electronics and improved functionality, this palm-sized system is easy to use, extremely sensitive and affordable. Used by large and small food processors, hospitals, restaurants, supermarkets, and other industries where rapid detection of contamination is critical, the SystemSURE Plus allows companies to quickly determine the cleaning efficiency and hygienic status of surfaces and water, ensure product quality, and reduce costs.

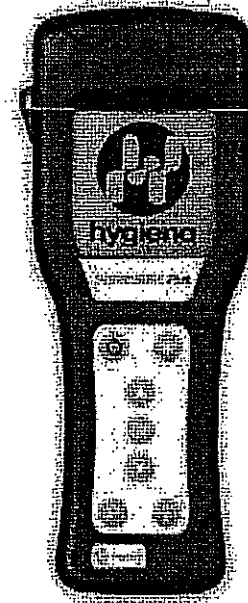

How Does the SystemSURE Plus Work?

In conjunction with the Ultraspap™ and Aquaspap™ testing devices, SystemSURE Plus measures adenosine triphosphate (ATP), the universal energy molecule found in all animal, plant, bacterial, yeast, and mold cells. Residues, particularly food or organic residues, contain large amounts of ATP. Microbial contamination also contains ATP, but in smaller amounts. After cleaning, all sources of ATP should be significantly reduced. When ATP is brought into contact with Hygiena's unique, liquid-stable luciferase/luciferin reagent in the Ultraspap or Aquaspap testing device, light is emitted in direct proportion to the amount of ATP present. SystemSURE Plus measures the amount of light generated and provides information on the level of contamination in just seconds.

The higher the reading, the more contamination present. Assessing the cleanliness of a surface immediately after cleaning ensures contamination has been removed. Depending on the industry, this system will help product quality, extend product shelf life, prevent cross-contamination, enable immediate corrective action and/or avoid recalls. ATP hygiene monitoring provides accurate and traceable verification of the hygienic status of a surface or water, which is a key component of a good hygiene program. ATP testing is a universally recognized tool used by the world's largest and smallest companies for measuring the hygienic status of surfaces and water in order to ensure product consistency and safety.

For more information on SystemSURE Plus, visit www.hygiene.net

SystemSURE Plus™


ATP Hygiene Monitoring System

Features:

- Small and lightweight
- Sensitive - detects down to 1 femtomole of ATP
- 250 programmable locations per sample plan
- 20 programmable sample plans
- Alphanumeric location ID
- Stores 2000 results
- Simple to use, menu-driven operation from keypad
- Results in 15 seconds
- Self-calibration at startup
- 2x AA battery-powered - 3,000+ tests
- SURE-Trend analysis software (optional)

ORDER # SS3

*Free 30-day trial program

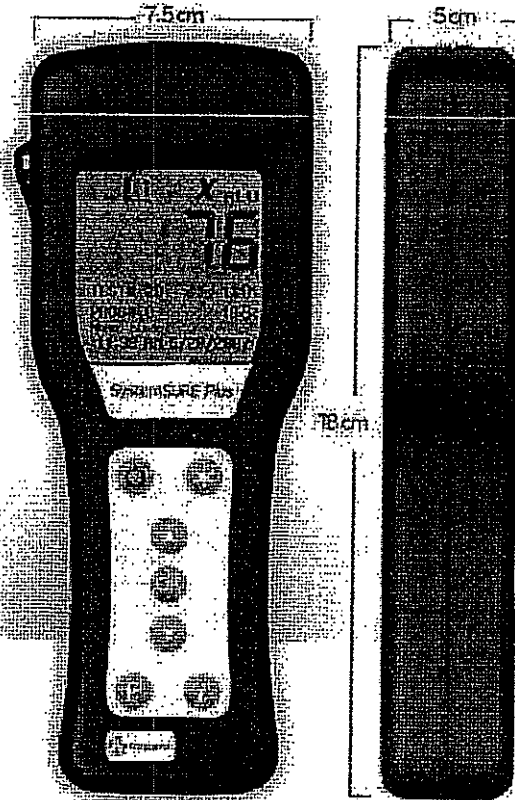

ATP Surface Test Ultrasnap™



ATP Water Test AQUASNAP™

New Technology Makes
Ultrasnap and Aquasnap
More Precise and Affordable

Ultrasnap and Aquasnap are user-friendly, self-contained ATP testing devices used with SystemSURE Plus. Both contain a unique liquid-stable reagent in place of the freeze-dried enzyme pellet used in other ATP testing devices. This new technology provides more accuracy, longer-lasting signal strength, and better reproducible results.

ORDER # US2020

(100 tests per box)


Features for Both:

- All-in-one sampling device
- 12-month shelf life
- Unique liquid-stable reagent
- Tolerant to temperature abuse
- Costs up to 50% less than other ATP tests

ORDER # AQ100
Total ATP

ORDER # AQ100P
Free ATP

(100 tests per box)

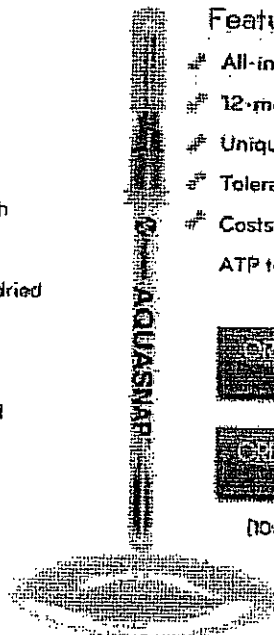

SystemSURE Plus Software

SURE-Trend V




Data Analysis Software


SURE-Trend, is an easy-to-use result database management software. It allows companies to track results, quickly identify problem areas and generate reports for management or recordkeeping. Companies that implement SURE-Trend will reduce costs and increase productivity.

Features and Benefits


- PC/Windows® based software
- Intuitive user interface and operation
- Quick querying and trending of results
- Customize reports and charts
- Export data into Excel
- Identifies problem areas for immediate corrective action
- Saves time and lowers costs

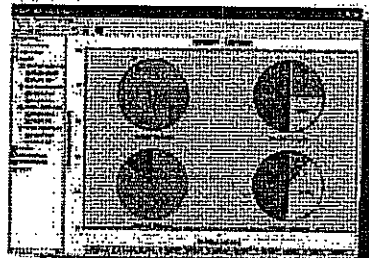

Customize graphs to your needs

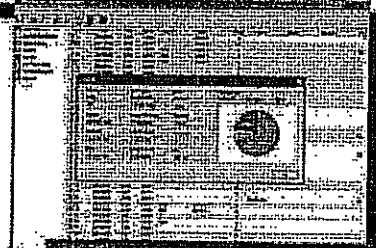

Quick statistics of location or sample plans

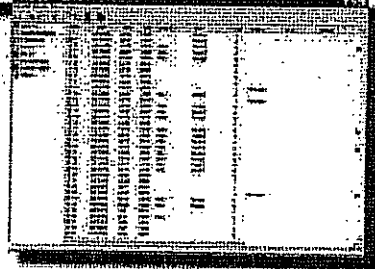

Easy set up of locations and pass/fail thresholds

SIMPLE
PRECISE
AFFORDABLE

4 easy steps | results in seconds



Additional Components

ORDER # PCD4009

Calibration Control Kit

Calibration Control Kit is used to verify calibration of the SystemSURE Plus luminometer. Each kit is comprised of a Positive rod and Negative rod.

ORDER # OK25

Positive Control Kit

Positive Control Kit is intended to be used for validating the efficacy and quality of the Ultraspap ATP test device. The kit comes with 25 sealed glass vials containing lyophilized adenosine triphosphate (ATP) and sugars to provide a predictable result.

ORDER # SSC001

Protective Carrying Case

Protect the SystemSURE Plus from accidental drops and environmental hazards with this protective carrying case.



Ask about Hygiene's Trade-Up program
to get a free SystemSURE Plus luminometer.

**TRADE-UP
PROGRAM**

Distributors info:

Americas

941 Avenida Acaso
Camarillo, CA 93012-6700
USA
Tel: 888.HYGIENA
Fax: 1.805.388.5531
www.hygiene.net

International

Unit 11, WENTA Business Centre
Cotnis Way Walford
Herts WD24 7ND, UK
Tel: ++44 1923 818821
Fax: ++44 1923 818825
www.hygiene.net